


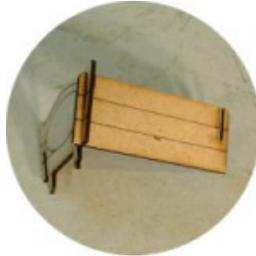


ASSEMBLY INSTRUCTIONS – MDF BARROW/CART KIT





When you receive your kit it will come as flat pack pieces. You can paint the parts before assembly but ensure you avoid getting paint in the joints or assembly will be difficult. Sometimes doing a “dry run” assembly first (no glue!) can help with knowing what should go where! When you’re ready to assemble, use a good quality glue for best results.



Slot the 2 ends and 2 sides of the cart together, with the plank detail facing out. If you’re planning to line the box with paper, use the unassembled parts as a pattern.

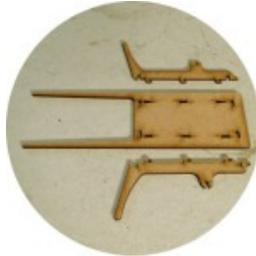

Slot the 2 leg parts into the underside of the base.

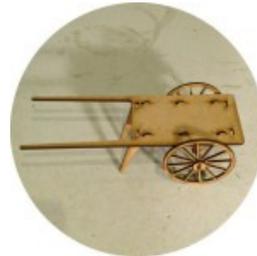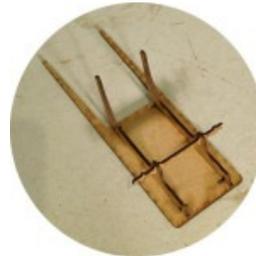

Slot in the axle, ensuring the wheel slot openings are facing up. Once dry, slip on the wheels and glue on the wheel caps. Finally, slot in the top of the cart and job done! We hope you’ve enjoyed putting your kit together.