




## ASSEMBLY INSTRUCTIONS

### CHICKADEE LIGHTHOUSE BIRDHOUSE

#### **HINTS & TIPS**


Always use a good quality wood glue. You may find low tack masking tape useful to hold things together while drying. Make sure you wipe away any glue oozes immediately with a damp cloth.



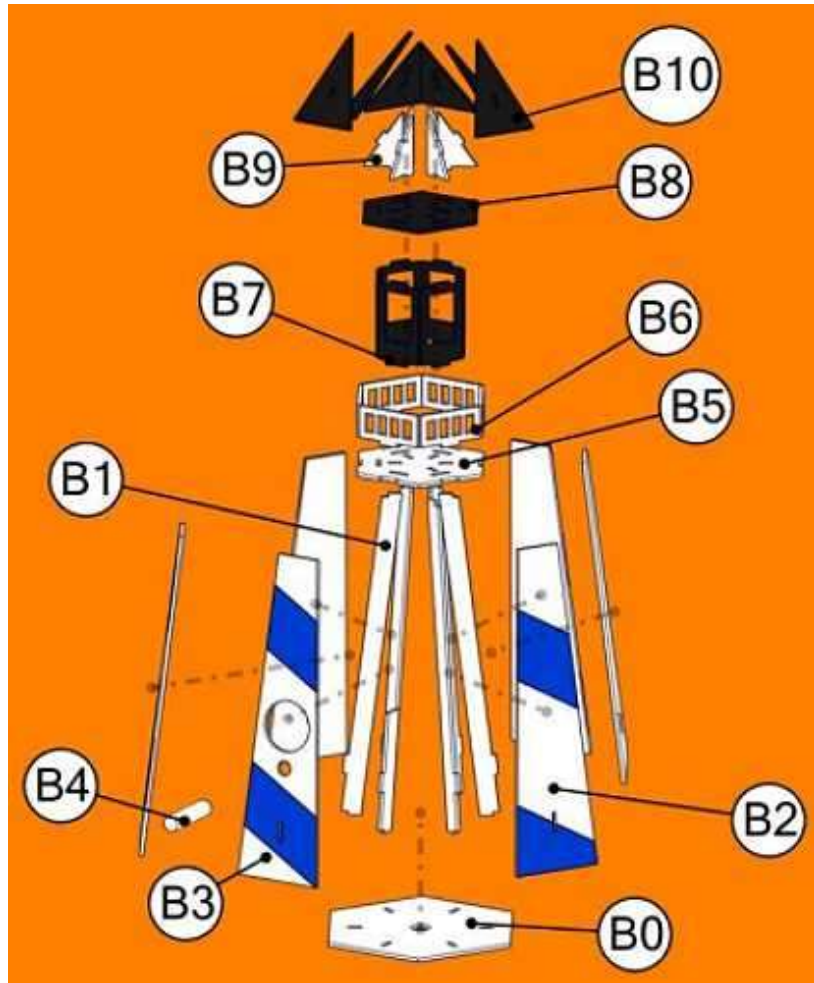

- Your kit will arrive as flat pack pieces – lay them out before you begin with good sides out.
- Glue and slot the support struts (B1) onto the base (B0).
- Glue and slot the wall panels (B2) onto the support struts (B1).
- Glue and slot on the cap piece (B5).



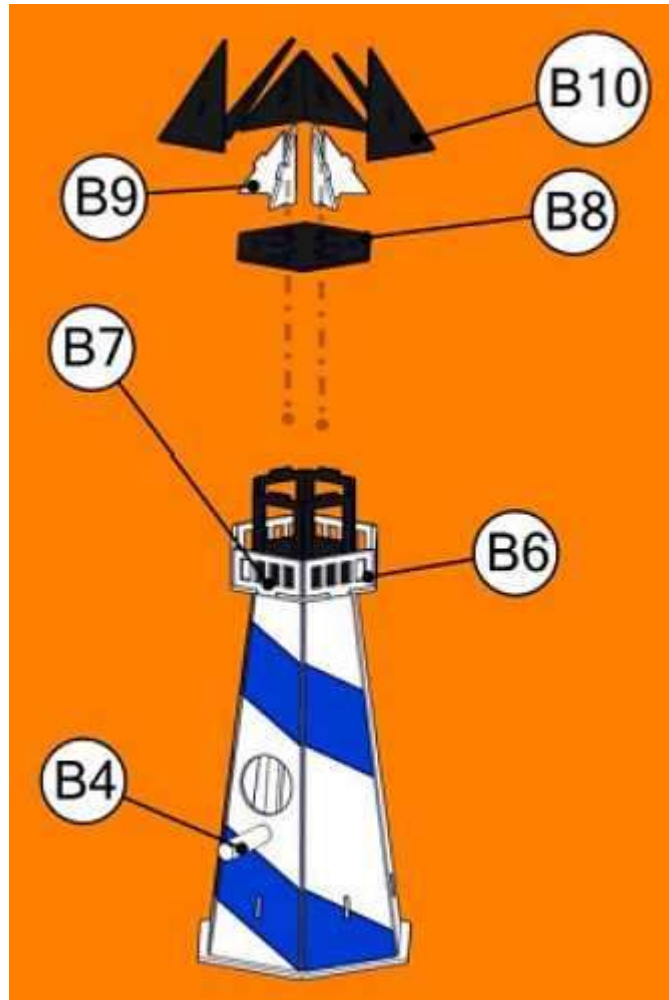

- Glue and slot the roof joists (B9) into the light housing cap piece (B8).
- Glue and slot the roof panels (B10) onto the roof joists (B9)
- Slot in the perch (B4).



- The finished piece with a basic paint job!
- For best results, seal the finished piece with a suitable acrylic sealer – DecoArt Mod Podge in matte is highly recommended. This provides a uniform surface on which to paint.
- You can also use Mod Podge as a glue to cover all or part of the birdhouse with pretty papers – use the unassembled kit pieces as a pattern.

We hope you've enjoyed putting your kit together.