




ASSEMBLY INSTRUCTIONS

SPARROW'S SQUEEZE INN BIRDHOUSE


HINTS & TIPS

Always use a good quality wood glue. You may find low tack masking tape useful to hold things together while drying. Make sure you wipe away any glue oozes immediately with a damp cloth.




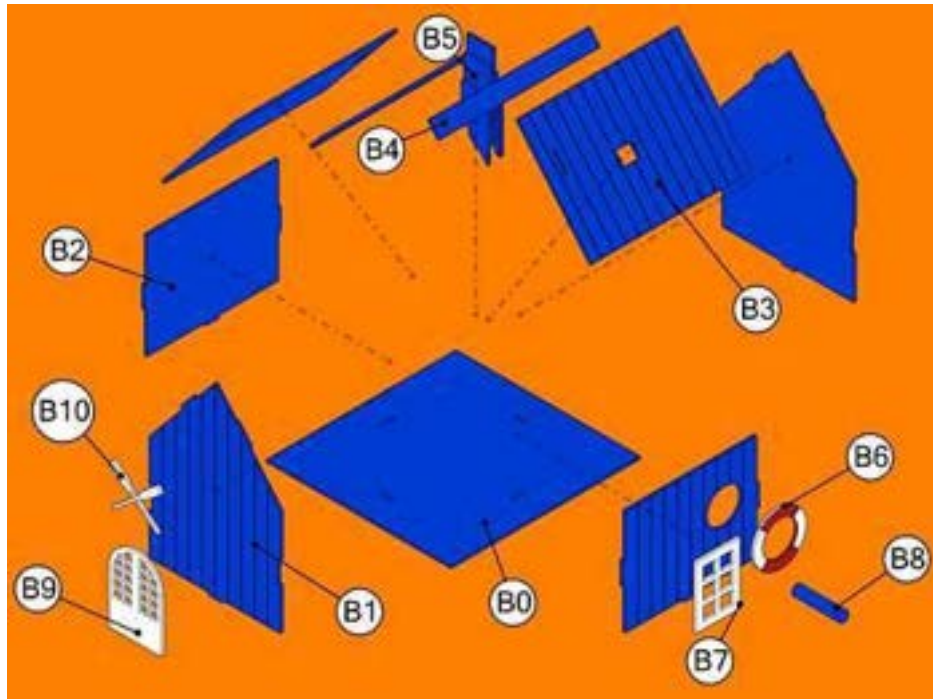

- Your kit will arrive as flat pack pieces – lay them out before you begin with good sides out.
- Glue and slot together the 2 sides (B1) and the front and back pieces (B2) – this forms the box of the birdhouse. Glue and slot this onto the base (B0).
- Glue the chimney pieces together (B5).

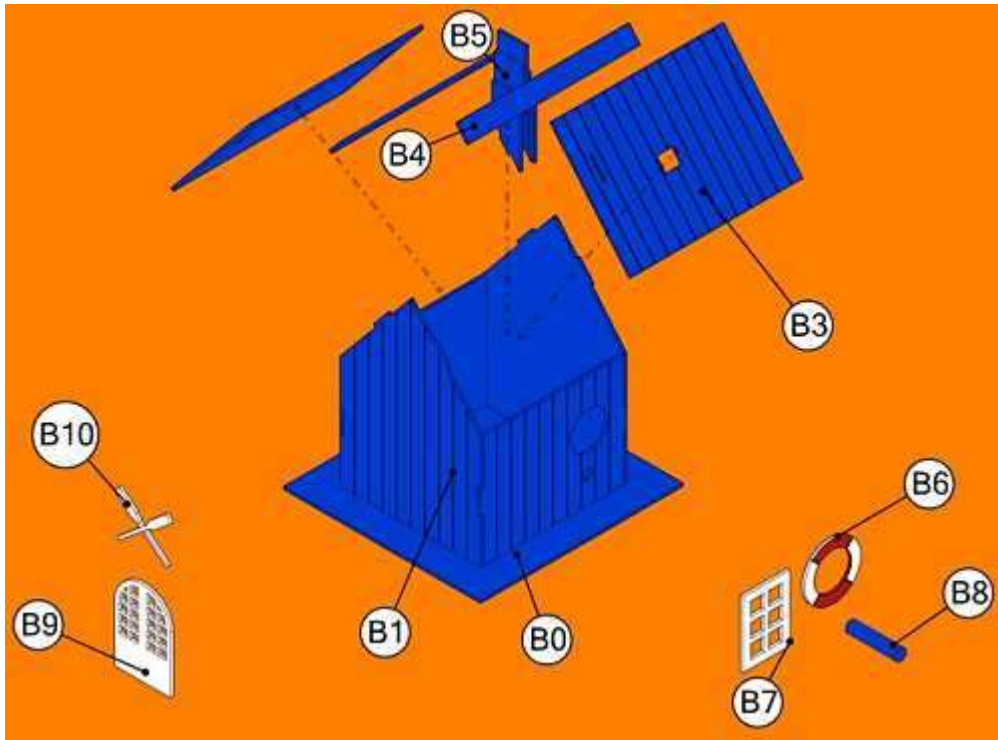

- Slot and glue the 2 roof pieces (B3) onto the house.
- Glue on the 2 roof ridges (B4) along the top of the roof.

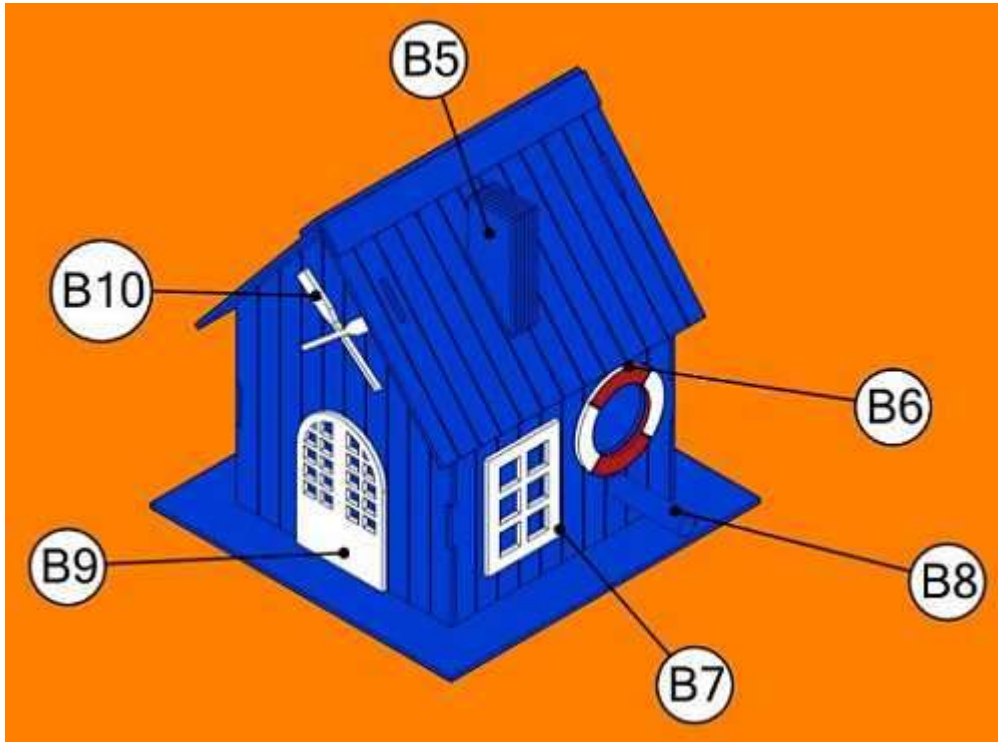

- Slot and glue in the chimney (B5).
- Glue the ring shape (B6) over the birdhouse entrance and glue in the perch (B8)
- Add the door (B9), the window (B7) and the crossed oars (B10)



- The finished piece with a basic paint job!
- For best results, seal the finished piece with a suitable acrylic sealer – DecoArt Mod Podge in matte is highly recommended. This provides a uniform surface on which to paint.
- You can also use Mod Podge as a glue to cover all or part of the birdhouse with pretty papers – use the unassembled kit pieces as a pattern.

We hope you've enjoyed putting your kit together.