




ASSEMBLY INSTRUCTIONS

TWITTER INN BIRDHOUSE


HINTS & TIPS

Always use a good quality wood glue. You may find low tack masking tape useful to hold things together while drying. Make sure you wipe away any glue oozes immediately with a damp cloth.



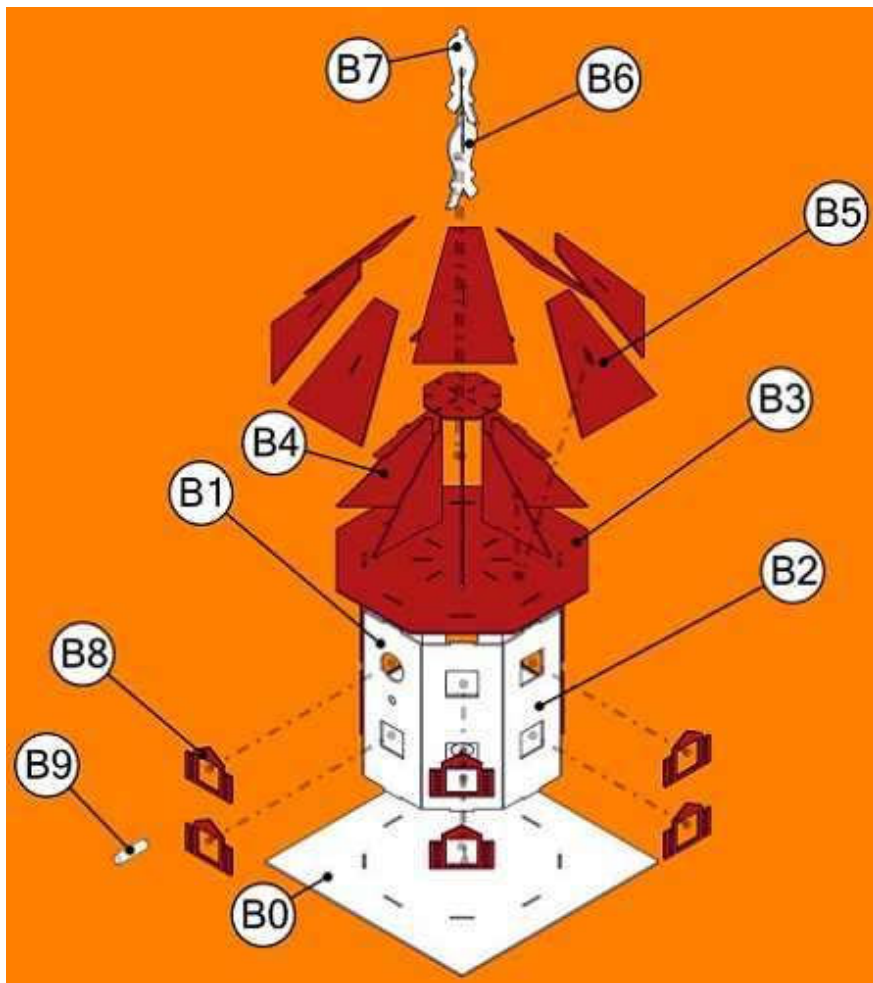

- Your kit will arrive as flat pack pieces – lay them out before you begin with good sides out.
- Glue the window shutters (B8) onto the wall panels (B2) – this kit is available with/without window cut outs, the version without cut outs comes with engraved placement guides.
- Glue and slot the wall panels (B2) onto the base (B0).
- Once dry, glue and slot on the ceiling piece (B3).
- Glue and slot in the roof joists (B4).

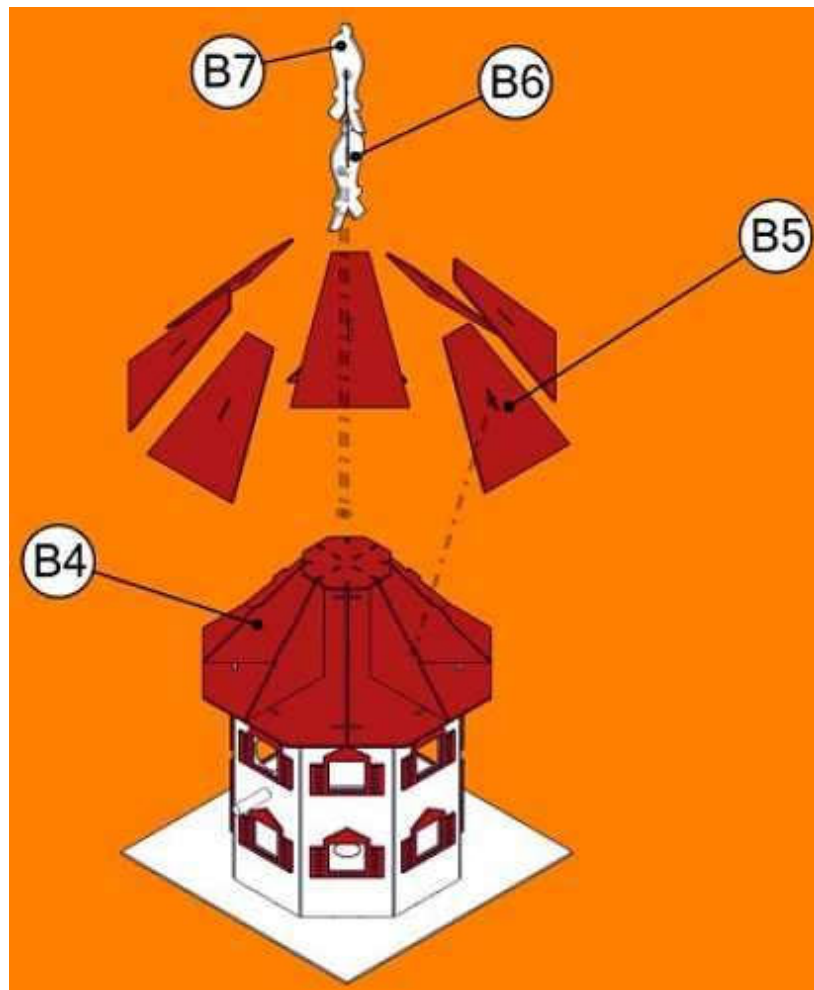

- Build up the roof panels (B5) by gluing and slotting around the joists (B4)
- Add the cap piece.
- Slide the 2 pieces of the roof finial together (B6 and B7) then glue and slot this into the cap piece.



- The finished piece with a basic paint job! This version shows the birdhouse with the window cut out options.
- For best results, seal the finished piece with a suitable acrylic sealer – DecoArt Mod Podge in matte is highly recommended. This provides a uniform surface on which to paint.
- You can also use Mod Podge as a glue to cover all or part of the birdhouse with pretty papers – use the unassembled kit pieces as a pattern.

We hope you've enjoyed putting your kit together.