

ASSEMBLY INSTRUCTIONS – VICTORIAN ROUND BOXES








PLEASE NOTE: Instructions apply to both styles of boxes. Your kit will come as flat pack pieces. You can paint the parts before assembly but avoid getting any in the joints or assembly will be difficult. Doing a "dry run" first (no glue!) can help with knowing what should go where! When you're ready to assemble, use a good quality glue for best results.





With the base piece good side down, slot in each of the side panels with good sides facing out. You don't need to glue the sides of the panels, use ample on ends to ensure a good seal and wipe up any glue oozes with a damp cloth before it dries. If you're planning to line the box with paper, use the unassembled parts as a pattern.



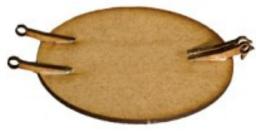

Fix the top on and leave to dry. With good side facing up, fix the hinge & clasp parts onto the lid.





When everything is dry, slot the dowel through the lid hinge and the base – dot glue on ends of dowel only. The clasp can be secured with a piece of dowel, chord, ribbon or twine. We hope you've enjoyed putting your kit together.