




ASSEMBLY INSTRUCTIONS

THE GUILDED FEATHER BIRDHOUSE


HINTS & TIPS

Always use a good quality wood glue. You may find low tack masking tape useful to hold things together while drying. Make sure you wipe away any glue oozes immediately with a damp cloth.



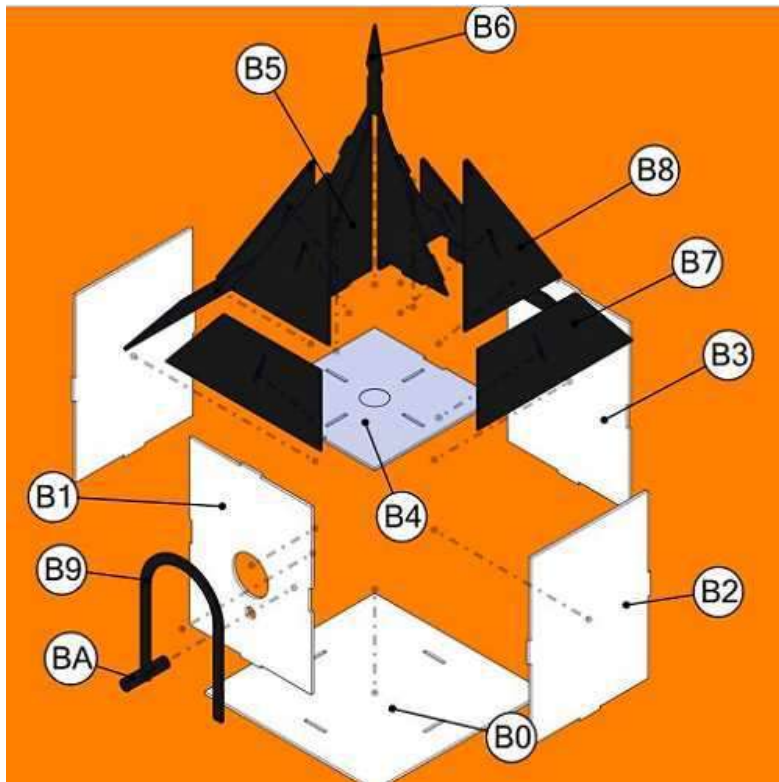

- Your kit will arrive as flat pack pieces – lay them out before you begin with good sides out.
- Glue and slot together the front (B1), the back (B3) and the 2 sides (B2) – this forms the box of the birdhouse. Glue and slot this onto the base (B0).
- Glue and slot in the ceiling (B4).
- Glue and slot together the roof joists (B5) and (B6).
- Once dry, glue and slot the roof joists onto the ceiling.

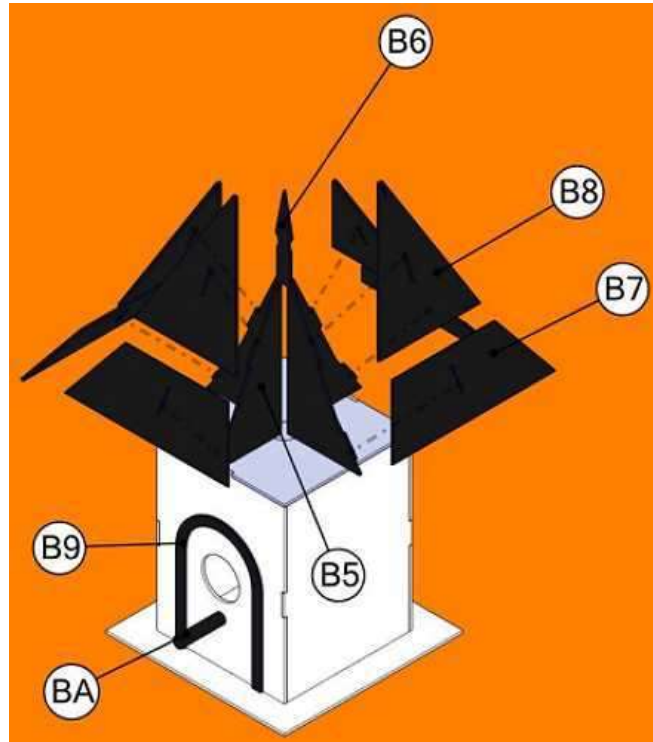

- Built up the roof panels (B7) and (B8) around the joists.
- A ring shape is included (not shown on plans – see photograph of finished sample) - glue this over the birdhouse entrance if desired.
- Add the door surround (B9) and perch (BA)



- The finished piece with a basic paint job!
- For best results, seal the finished piece with a suitable acrylic sealer – DecoArt Mod Podge in matte is highly recommended. This provides a uniform surface on which to paint.
- You can also use Mod Podge as a glue to cover all or part of the birdhouse with pretty papers – use the unassembled kit pieces as a pattern.

We hope you've enjoyed putting your kit together.